

Instruction for RZ67 to CFH Adapter

Ver. 1.0

1. Detach the film back from RZ67 body.




2. Attach securely your digital back on the adapter.


Attach the digital back at the bottom first and push the digital back downward to insert completely in the bottom hook and swing it up to where the top meets the adapter.

Then let the top hooks grab the digital back by using the grab slider on the adapter.

Check and make sure if it is strongly attached on the digital back. If you don't confirm this, your digital back may fall off from the adapter.

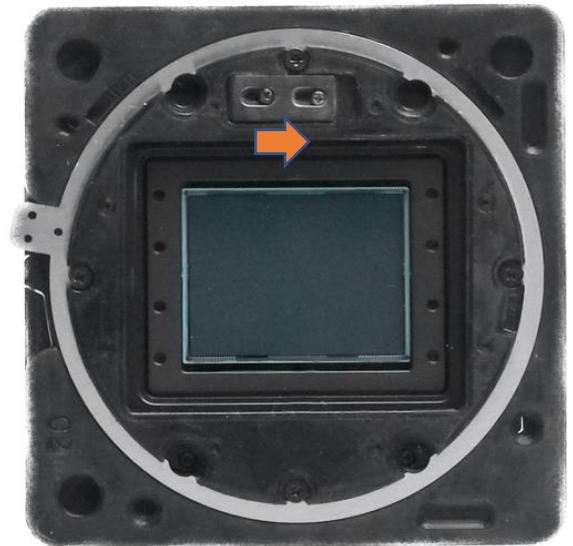

2. Move the Adapter Lock lever aside of adapter to position O(Open)

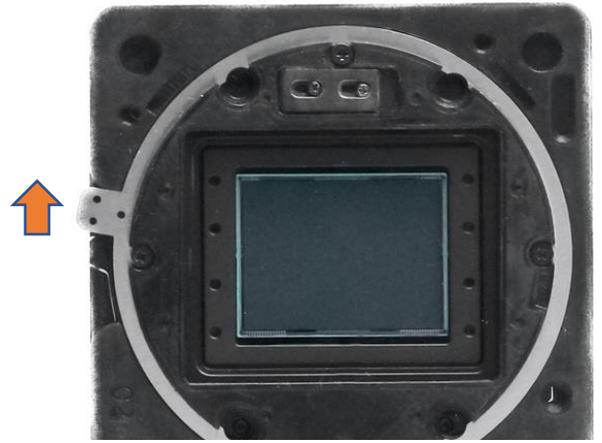

3. Securely attach the adapter on the camera body by aligning the 4 locking pins. Move Adapter Lock lever to L (Lock). Check each locking pin and Make sure the adapter is securely attached on RZ67. Be sure that the adapter is secure, else the digital back can fall off the camera.



5. Set the R-M Lever to 'M' (multiple exposure).



6. Align the white dot on the Release Button Collar with the white dot on the lever below.



7. Attach the sync cord to the PC Sync "IN" port on your digital back to the Flash Sync Terminal (X-sync) of the lens. If you have PhaseOne P or IQ series, you can get the sync-in signal through a Multi-Connector cable and port.

Please don't connect to the PC Sync "Out" port on your digital back. The "Out" port should be used for flashes or transmitters.



PC Sync-Out Port
Connect To Flashes



PC Sync-In Ports
Connected From Lens

8. Some old digital backs need to change menu setup. For example, select Camera Mode to Large Format or any legacy system.
If your digital back has RZ67 option, DON'T select RZ67, because it will not work with the adapter.

9. Ready to shoot!



[Rotating Digital Back]

1. Move the R-M lever to “R” Revolving Back Position



2. Turn the digital back 90 degree



3. Move the R-M lever BACK to “M” The multiple exposure mode



4. Ready to shoot with Portrait mode.